

The Kebony® technology




STEPS

1 Impregnation





Furfuryl alcohol.
Produced from a
bio-based liquid

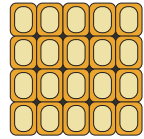


Wood cells
before treatment

2 Curing & Drying

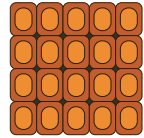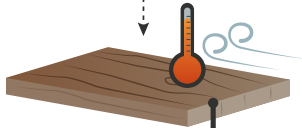

Wood cells
soaked in liquid

3 Kebony wood

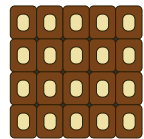

Wood cells after
treatment: significantly
thicker

Stable, locked-in furan
polymers in the wood
cell walls give:

- Outstanding stability
- Maximum hardness
- Guaranteed long life

